

## GPS Location Finder – Quick Reference Sheet

### Buttons and lights

#### Four buttons on the watch:

1. **Power switch**; top-left.
2. **Point Of Interest, POI, button**; top-right.
3. **Time Adjust button**; centre-right; pull button.
4. **Download/Location Finder button, DL/LF**; bottom-right.

#### Nine LED lights:

- Eight LEDs that illuminate red for direction or blue for original location at N, NE, E, SE, S, SW, W, and NW positions on the watch face.
- The South LED illuminates red when the Location Finder is charging.

### Charging

1. Plug the USB charge cable into the side of the watch at the bottom-left then the USB connector into a USB port.
2. The South LED will illuminate red until the Location Finder is charged in 3 hours then turn off.
3. Disconnect the charge cable when the South LED is off, the Location Finder is ready to be used for 21 hours.
4. The watch itself uses a separate internal battery.



E-mail: info@3-  
Locate.com

**Revision:**  
**09/10/12**

### How to use

1. Ensure the Location Finder is charged & USB port plug is in.
2. Press and hold the power button for 3 seconds, GPS LED will illuminate green.
3. Green GPS LED will start flashing every 5 seconds to when your GPS location is acquired.
4. Press and hold the POI button for 2 seconds to mark your current POI, 8 red LEDs will illuminate around the watch face.
5. Start your journey. Follow the red LED direction to return to the marked POI.

### What do the lights mean?

- No LEDs on, GPS Location Finder function is off.
- Red LED ON in 1 of the 8 directions indicates the direction back to the marked POI.
- Green GPS LED between the South & South East LED flashing every 5 seconds indicates GPS is able to location satellites OK.
- Blue LED ON in 1 of the 8 directions, you're within 15 meters / 50 feet of your POI.
- To turn the watch off press and hold the power button for 3 seconds.